


BOOMERANG BAGS INSTRUCTIONS

CUT


- **Handles** x 2 80cm x 12cm (Approx. 32" x 5")
- **Bag** x 1 91cm x 42cm (Approx. 36" x 16")
- **Pocket** x 1 23cm x 21cm (Approx. 9" x 8") * stencilled pocket material provided

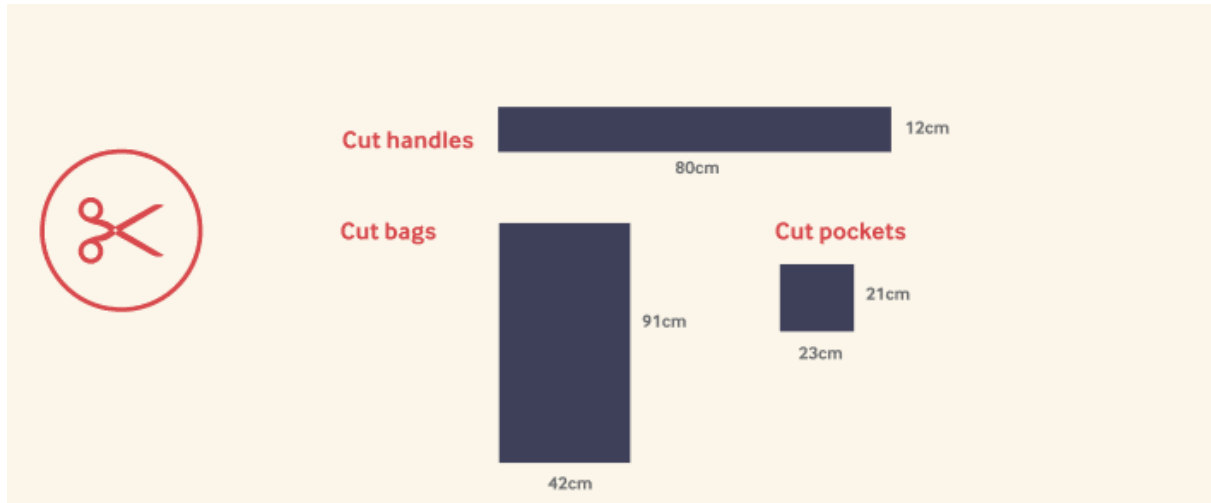

Note: These measurements do not have to be exact, it will not matter if the bags are a little larger (better than wasting material)


IRON

- **Handles** in half lengthways, then iron outside edges in to middle fold line.
- **Pocket** in 1cm all around then on top shorter side another 1cm to make pocket hem.

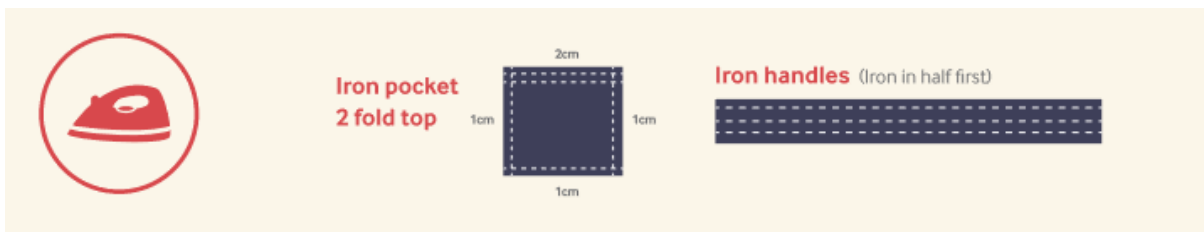

PIN & SEW

- Pin and sew pocket (if available) on centre of front of bag.

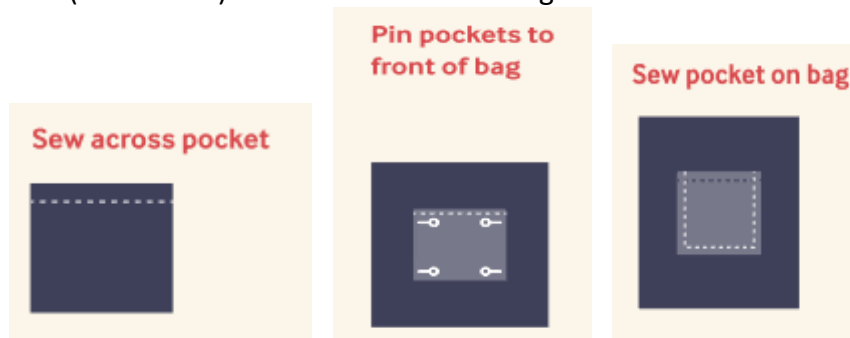

Sew down both sides of handles, approx 1/8 to 1/4 inch from edges and pin to ends of bag on right side of material, about 9cm (3 1/2 inches) from the sides.



Overlock (or zigzag) ends of bag, thereby securing handles in place.


Form bag (handles on the inside) and sew and overlock sides.



Box Corners (mitre)



Turn over top of bag approx 1" sew hem and also around top edge.

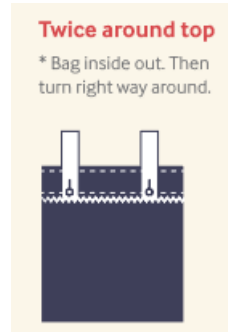

Note: A loop (using scrap or used binding) is useful to sew on so bags can be held open when used at the checkout. * Attach when doing top hem of bag.